1	
2	
3	
4	
5	Security Policy
6	,
7	
8	For
9	
10	
11	NRZ/T1/E1 Link Encryptor
12	, ,
13	
14	ES-14885-4
15	Rev B
16	
17	
18	
19	
20	
21	May 17, 1999
22	
23	
24	
25	
26	
27	
28	Prepared by
29	
30	
31	CYLINK CORPORATION

1			
2	SCOPE OF DOCUMENT		2
3	2 APPLICABLE DOCUMENT	S	2
4	3 SECURITY LEVEL		3
5	4 SECURITY RULES		3
6	4.1 CRYPTOGRAPHIC MODULE	4	1
7	4.2 ROLES AND SERVICES	4	1
8	4.2.1 User Role	4	4
9	4.2.2 Crypto Officer Role	5	5
10 11	4.3 PHYSICAL SECURITY	6	5
12	4.5 KEY MANAGEMENT	ry)
13	4.6 CRYPTO ALGORITHMS		/ 2
14	4.7 SELF TEST		3
15		Y RELEVANT DATA ITEMS (SRDIS)9	
16	6 DEFINITIONS OF SRDI MO	DDES OF ACCESS)
17			
18	1 Scope of Document	}	
19	- Scope of Bocument	•	
20	This document contains the se	curity policy requirements for the Cylink NRZ/T1/E1 Link	
21	Encryptor system module. The	RRZ/T1/E1 Link Encryptor System shall be referred to as the	
22	CLE (Cylink Link Encryptor) in		
23	31 · · · 3	,	
24	2 Applicable Docume	nts	
25			
26	• FIPS 140-1 Sec	urity Requirements for Cryptographic Modules	
27		ved Test Requirements for FIPS 140-1, Security Requirements	
28	for Cryptographic Modu	les (DTR)	
29		a Encryption Standard (DES)	
30		6 Modes of Operation	
31		ure Hash Standard (SHA-1)	
32		tal Signature Standard (DSS)	

3 Security Level

The CLE meets the overall requirements applicable to Level 2 security of FIPS 140-1, and meets Physical Security applicable to Level 3.

	
Security Requirements Section	Level
Cryptographic Module	2
Module Interfaces	2
Roles and Services	2
Finite State Machine	2
Physical Security	3
EFP/EFT	N/A
Software Security	3
Operating System Security	N/A
Key Management	2
Cryptographic Algorithms	2
EMI/EMC	2
Self Test	2

4 Security Rules

This section documents the security rules enforced by the CLE to implement the security requirements of FIPS 140-1 overall Level 2 module, with Level 3 Software and Physical Security.

4.1 Cryptographic Module

The CLE shall be implemented as a "Multiple-Chip Standalone Cryptographic Module", as defined in FIPS 140-1.

4.2 Roles and Services

The CLE shall employ role based authentication of the operator. The module supports two roles as required by FIPS 140-1. The roles are the User Role and the Crypto Officer Role. Access to these roles is restricted at the front panel by the use of a Medeco lock, and at the Network Management (ethernet) port by the use of a password entered into the PrivaCy Manager system. An operator is authenticated to the User and Crypto Officer roles at the front panel through possession of the key that will turn the Medeco lock to the Enable position. Concurrent operator access/operation is prevented by disallowing SNMP access when the Medeco lock is set to enable the front panel.

 PrivaCy Manager is an application that can be used to remotely control the CLE through an Ethernet connection. In addition to the services that can be initiated from the front panel, PrivaCy Manager can initiate network/voice authentication, initiate a software download operation, display the CLE MAC address, and display the date and time of the last key exchange.

Physical Maintenance shall be performed at the factory, as there are no services that require the cover to be removed in the field, and there are no logical maintenance services performed in the field. The CLE module should be zeriozed by a Crypto Officer before the module is returned to the factory, either by command or by removing the cover.

4.2.1 User Role

The User Role provides the operator with the ability to control the operational mode of the CLE and thus configure the network security policy. The services available to an operator while in the User Role are as follows:

 Set Operational Mode: This service allows the operator to select the current operational mode. The operator shall be permitted to command the CLE into the following modes:

a) Clear Mode

b) Standby Modec) Secure Mode

- d) Clear Pending Secure Mode (Dial-Up only)
- e) Standby Pending Secure Mode (Dial-Up only)

2	4.2.2	Cr	ypto Officer Role
3 4 5 6	The C below.	rypt	o Officer Role provides the operator the ability to perform all of the services listed
7	1.	A	arm/Event Services
8 9		a)	Display Event Log: This service allows the operator to scroll through and view the contents of the CLE's event log.
.0		f)	Clear Event Log: This service allows the operator to completely clear the contents of the event log.
2	2.		me/Date: This service allows the operator to set the real time clock to the current date
4	3.	Ke	y Management
5		a)	Set Auto Key Change Attributes
6		b)	Days Interval
7		c)	End to End Delay
8		d)	Clear Modes Allowed/Disallowed
9		e)	Mode NET CERT, MANUAL (authentication) KEY, UNAUTH DH
20 21		f)	Zeroize Keys: This service allows the operator to erase critical security parameters When this service is activated the following information shall be actively erased:
22			(i) CLE Network Certificate
23			(ii) CLE DSS secret key (X)
24			(iii) PrivaCy Manager DSS public key
25			(iv) PrivaCy Manger/CLE (SNMP) encryption key
26			(v) PrivaCy Manger/CLE SNMP message counter
27			(vi) CLE/CLE encryption key
28			(vii) Manually Entered Authentication Key
29			(viii) Far End CLE serial number
30			(ix) Last key change timestamp
31			(x) Event Log
32		g)	Set Manual Authentication Key
33	4.	Se	et Line Interface Configuration Parameters
34	5.	Ne	etwork Management
35		а) Display/Set Unit IP Address
36		b) Display/Set Gateway IP Address

1 c) Display/Set Subnet Mask Address 2 d) Display/Set Trap1/Trap2 IP Address 3 6. System Test: This service allows the operator to set a Network Encryptor Loopback, or a DTE Encryptor Loopback, or clear a loopback that has been previously set. CLEs 4 with a T1 or E1 interface also allow setting or clearing a Network Line Loopback or a 5 6 DTE Line Loopback 7 7. Display Manufacturing Info: This service allows the operator to display the following 8 information: 9 a) Firmware Revision 10 b) Firmware Date 11 c) Hardware List 12 d) Hardware Issue 13 e) Manufacturing Date 14 f) Unit Serial Number 15 g) Line Interface Unit (LIU) Type 16 h) End to End (Link) Key Size, and Encryption Mode and Algorithm 17 SNMP Key Size, and Encryption Mode and Algorithm 18 8. Set Default Configuration 19 9. Firmware Update 20 21 4.3 Physical Security 22 23 1. Access to the circuitry contained within the CLE shall be restricted by the use of a Medeco lock. It shall not be possible to remove the enclosure cover without unlocking 24 25 the lock. 2. The CLE shall include tamper response and zeroization circuitry. Upon the removal of 26 the enclosure's cover, all plaintext cryptographic key and unprotected critical security 27 parameters shall be immediately zeroized. This capability shall be operational whether 28 29 or not power is applied to the module. 30 3. The CLE shall not employ ventilation holes, and shall be designed to prevent physical 31 probing inside the enclosure. 32 33 34 4.4 Operating System Security 35

- The FIPS 140-1 operating system requirements (FIPS PUB 140-1 section 4.7) do not apply to 1 the CLE because it is not a general purpose computer and thus it cannot run untrusted user-2
- supplied software. However, the CLE's firmware can be field updated using a download 3
- process. The following rules apply to the downloading of new CLE firmware. 4
- The CLE shall verify the signature of the binary image. If this verification fails, the module shall 5 6
- continue operation using the pervious version of firmware, the downloaded binary image shall be marked as non-executable, and an SNMP-readable MIB status shall be set reporting the 7
- 8 failure.

4.5 Key Management

11 12

13

16

17

18

19 20

21

24

25 26

29

30

35

36

37

10

- 1. The PRNG seed (referred to as the XKEY in FIPS 186 Appendix 3.1) shall be installed into the CLE using the Cylink Manufacturing Configurator (CMC) process.
- 2. PrivaCy Manager/CLE encryption keys shall be re-negotiated each time a new CLE 14 15 Network Certificate is loaded.
 - 3. PrivaCy Manager/CLE encryption keys shall be established using the Diffie-Hellman Key Agreement process.
 - 4. Messages exchanged between the PrivaCy Manager and the CLE systems that contain the Diffie-Hellman public components used to establish the PrivaCy Manager/CLE encryption key shall be signed using the DSA associated with each entities Manufacturing Certificate.
- 5. Prior to accepting the PrivaCy Manager/CLE encryption key the CLE shall perform 22 23 various message and certificate signature verification tests.
 - If any of the tests fail the PrivaCy Manager/CLE encryption key and the newly loaded Network Certificate are rejected and the CLE shall report the failure at the end of the protocol.
- 6. A new CLE/CLE encryption key shall be negotiated each time the CLE transitions from 27 28 a non-secure state to a secure state.
 - 7. While in the secure mode the CLE/CLE encryption key shall be periodically renegotiated.
- 8. CLE/CLE encryption keys shall be established using the Diffie-Hellman Key Agreement 31 32 process.
- 9. When establishing a new ¢LE/CLE encryption key, the messages containing the Diffie-33 34 Hellman public component shall be signed.
 - 10. Prior to accepting the CLE/CLE encryption key each CLE shall:
 - a) Verify the compatibility of the two units' session settings:
 - b) Verify the validity of the Network Certificate's signature.
- 38 If any of the above tests fail the CLE/CLE encryption key shall be rejected.

39

11. If the Leased Line link encryption key generation process fails, the CLE shall generate 2 an alarm. 12. If a successful Leased Line CLE/CLE key exchange does not occur within the Days 3 4 Interval setting of the previous key exchange, the CLE shall produce an alarm due to the resulting Local Secure mode. 5 6 13. The CLE shall have the ability to generate a pseudo-random authentication key, and use it to authenticate the end-to-end communication protocol, in situations where 7 PrivaCy Manger and Network Certificates are not available. The plaintext 24-byte 8 authentication key shall be generated randomly as per FIPS Pub 186, shall not be 9 10 displayed after user acceptance, and shall be zeroized by operator command or by a 11 tamper situation. 12 14. The CLE shall have the ability to accept and utilize a manually entered end-to-end 13 authentication key. The plaintext 24-byte authentication key shall not be displayed after 14 user entry, and shall be zeroized by operator command or by a tamper situation. 15 16 4.6 Crypto Algorithms 17 18 1. The CLE shall use the Data Encryption Standard (DES) algorithm or Triple DES to 19 protect the user line data. Sensitive PrivaCy Manager/CLE data shall be protected 20 using the Triple DES algorithm. 21 2. The CLE shall use the Digital Signature Standard as described in FIPS 186 for the authentication of all security related information. 22 23 3. As specified in FIPS 186, the module will also support the Secure Hash Standard 24 (SHA-1) as described in FIPS 180-1. 25 4.7 Self Test 26 27 28 1. The following Power-Up Self Tests shall be performed when power is first applied to the 29 system. 30 a) Field Programmable Gate Array (FPGA) Test 31 b) Program Memory (ROM/FLASH) Integrity Test 32 c) General Purpose Memory Test 33 d) Non-Volatile Memory Integrity Test 34 e) Real Time Clock Test 35 f) Cipher Chip Test 36 g) Random Number Generator Test 37 h) General Cryptographic Algorithm Test

1			Pairwise Consistency Test
2			
3 4		2.	During normal operation, once during each second the battery that backs up the non-volatile RAM shall be tested.
5 6 7 8		3.	All keys to be used for symmetric key cryptographic algorithms shall be checked to verify that they are cryptographically suitable for use as an encryption/decryption key. This check shall be performed immediately after the value of the key has been established and before the key is used or stored for later use.
9 10			For example, a DES key must be checked to verify that it is of the correct parity and is not on the list of known "weak" or "semi-weak" DES keys.
11 12	5	De	efinition of Security Relevant Data Items (SRDIs)
13		(1)	CLE Manufacturing Certificate
14		(2)	
15		(3)	PrivaCy Manager/CLE SNMP Encryption Algorithm Flag
16		(4)	
17		(5)	PrivaCy Manager/CLE SNMP Encryption Key Size Flag
18		(6)	CLE to CLE Encryption Algorithm Flag
19		(7)	CLE to CLE Encryption Mode Flag
20		(8)	CLE to CLE Encryption Key Size Flag
21		(9)	Near End Network Certificate
22		(10) Far End Network Certificate
23		(11) Far End Manual Authentication Code
24		(12) Firmware Binary Image Signature
25		(13	PRNG Running Seed (XKEY)
26		(14)	CLE DSS Secret Key (X)
27		(15)	CLE DSS Public Key (Y)
28			PrivaCy Manager DSS Public Key
29		(17)	PrivaCy Manager/CLE (SNMP) Encryption Key
30			PM/CLE Message Counter Value
31			PrivaCy Manager/CLE Message Counter
32			CLE/CLE Encryption Key
33		(21)	Near End CLE Challenge Value
34		(22)	Far End CLE Challenge Value

1		(23) Voice Authentication Hash Value
2		(24) Far End CLE Serial Number
3		(25) Far End CLE Serial Number timestamp
4		(26) Last Key Change Timestamp
5		(27) Event Log
6		(28) Key Change Method
7		(29) Begin Time
8		(30) End Time
9		(31) Days Interval
10		(32) Clear Modes
11		(33) Key Management Mode
12		(34) Manual Authentication Key
13		(35) Algorithm Adaptation Flag
14		(36)Exclusion List: For Dial-Up operation
15		
16	6	Definitions of SRDI Modes of Access
17		
18		The table below defines the relationship between access to SRDIs and the different module
19 20		services. The modes of access are shown as codes in the table and are defined as follows:
21		a) D - The SRDI is set back to the manufacturing default by the service.
22		b) G - This service generates the SRDI internal to the CLE.
23 24		 c) I - The SRDI is input into the CLE by this service. d) R - The SRDI is read and used by the service.
25 25		e) U - The SRDI is read and used by the service.
26		f) V - The SRDI is verified by the service.
27		g) Z - The SRDI is erased by the service.

Table 1 Services Versus SRDI Access

	Crypto Officer Role	$\sqrt{\cdot}$		ī	<u> </u>		T-	Т	1					Ι.	Τ.	L	1	Τ.	1.	Т	7	_	_	_	_		г —	_	,		,	- , 1
Role		+	Y	×	-	_	_	_		×	×	×	×	×	×	×	×	ľ	×	×	×		×	×	×	×	×	×	×	×	×	<u> </u>
	Jser Role	+-	+	╀	_	-	×	⊢					_	Ļ	-		_	_	L	Ļ	<u> </u>	L	_			L	L	_				╛
	xlcusion List	1	\perp		-	Œ	⊢			_		_			L	L			7	L											_	
	lgorithm Adaptation Flag	_	_	╄-		R	├—	Œ		_				L			L	_	_			æ						L	Ш			
	Manual Authentication Key	┰	\perp	╀		Œ	Œ	æ	\sqcup	_			_		_		L	_		7												
	(ey Management Mode	1-	↓_	L		Œ	æ	Œ											歪	<u> </u>												П
	Wollsallow/Disallow	丄	_		Ш	Œ									L			~		L											۵	
	lavietni aysc	1	L		Ц											æ															۵	71
	əmiT bn	1				_									Œ																۵	
	9miT niges	1		L										₩																	۵	71
	Change Method	1				_							8													-					_	71
Ē	Fvent Log	L				>)	n	_ (r	7									2												
pto	-ast Key Change Timestamp	1						U												Z											۵	기
cry	st End CLE Serial Number		\prod			5	>	כ						٦						Z				\exists					\dashv	7	۵	
Ĕ	Voice Authentication Hash Value			3			\exists		\top																7		\dashv		\dashv	\dashv	\dashv	†
CLE=Cylink Link Encryptor	ar End CLE Challenge Value		Γ			>	>	>	\top	1	\dashv								-	П				\exists	╗	\dashv	\exists		\dashv	7	\dagger	┤ ┃
اد	Vear End CLE Challenge Value			П	\sqcap	G	σ	U	\top	7		d					_	П			_	+	\dashv	7	1		+	\neg	\dashv	7	+	┦┃
Ē	CLE/CLE Encryption Key	1	T			1		5	\top	1	1									Z					7	_			+	+	_	┪┃
္ဂ	PM/CLE Message Counter	5	T	5	7				7	7		_	\dashv		-					Z		+	1	7	\dashv	-				+	+	Ⅎ ┃
ات	PM/CLE Challenge Value	>	>	>	\exists				_	†	7	1	\dashv		_					\dashv	7	1	7	+	\dashv	1	\dashv		\dashv	-	+	\dashv [
	PM/CLE Encryption Key	G	G	IJ		7		7	+	+	T	7		\dashv						Z	7	7	1	-	+	_	\dashv		-	+	\dashv	-
흸	PM DSS Public Key	┺	_	-	\dashv													7	\dashv	_	+	+	-+		+	-	\dashv	+	+	┨ ├		
ala	CLE DSS Public Key (Y)	₽—	æ	ŋ	7	7	\dashv	-	+	+	+		ᅥ	+			-		\dashv		1	-	\dashv	-	+	\dashv	+	\dashv	\dashv	+	\dashv	┨┠
Σ	CLE DSS Secret Key (X)	₩	╄—	\vdash	\dashv	1	-	-	\dashv	\dagger	\dashv		ᅱ	\dashv			\dashv		\dashv	Z	-	\dashv	+	-	\dashv	-		-	+	+	+	-
င္က	PRNG Running Seed (XKEY)	_	-	Н	+	\dashv	ᅥ)	+	+	+	1	-	+		-	\dashv	\dashv	-	4	-	+	\dashv	-	+	-	\dashv	\dashv	-+	\dashv	+	
[≥	Firmware Binary Image Signature	_	-		+	-	+	7	+	+	\dashv	\dashv	\dashv	-	-	\dashv	-			-	\dashv	\dashv	+	\dashv	+	+	\dashv	-	+	\dashv	\dashv	$\exists 1$
(PM=PrivaCy Manager,	Far End Manual Auth Code	+	┢		-	>	>	>	+	+	+		-	\dashv		-	\dashv	\dashv		-	\dashv	+	+		+	\dashv	\dashv		-	+	1	-
	Far End CLE Network Certificate	-	-	H	-+	>	-+	>	\dashv	+	+	+	+	\dashv	-	\dashv	\dashv	-	-	\dashv	-	+	+	4	+	\dashv	+	4	\dashv	+	+	┤ ┃
ဋ	Near End CLE Network Certificate	<u>ج</u>	≥	2	-		_		+	+	+	+	+	-	\dashv	+	\dashv	-	\dashv	7	\dashv	+	+	+	\dashv	4	\dashv	\dashv	\dashv	+	1	1
Items	CLE/CLE Encrypt Key Size Flag	-	0	9	\dashv	\dashv	\dashv	æ	+	+	+	+	\dashv	+		-	_		\dashv	-	\dashv	\dashv		+	\dashv	_	+	-	_	+	٥	- 1
멅	CLE/CLE Encrypt Mode Flag	_	-	\dashv	+	_	-+	Œ	+	+	+	+	+	+	-			-	-	\dashv	+	\dashv	+	-	+	+	\dashv		~	+	+	┦╏
֓֞֜֜֟֜֟֜֟֜֟֜֜֟֜֜֟	CLE/CLE Encrypt Algo Flag		-	H	\dashv	+	-+	Œ	+	+	+	+	\dashv	\dashv	-	+	\dashv	-	-	\dashv	-	+	+	+	\dashv	-	+	\dashv	œ	\dashv		∦ [
la Jan	PM/CLE Encrypt Key Size Flag				\dashv	+	-	<u>د</u>	+	+	+	4	-	+		-	-	4	-	4	\dashv	\dashv	4	-	4	4	4	\dashv	<u>د</u>	+	\perp	41
<u>6</u>	PM/CLE Encrypt Mode Flag				\dashv	+		œ	+	+	+	-	\dashv	+	_	+	\dashv	\dashv	-	\dashv	-	-	+	\dashv	+	4	+	+	<u>~</u>	+		-
Ĭ	PM/CLE Encrypt Algo Flag				+	+	-+	œ	+	+	+	+	4	-		+	4	_	-		+	4	+	4	4	1	4	-	œ	1	_	41
틸	PM Manufacturing Certificate				+	+	-	-	_	+	-	+		4	\dashv	-	-	-	\dashv	-	_	4	4		\perp	4	4	4	E	1	_	↓ [
Security Relevant Data	CLE Manufacturing Certificate	-		-	-	+	\dashv	-	+	+	+	-	+	-	_	\dashv	\dashv	_		-	\downarrow	4	4	4	4	4	4	4	4	4	-	-
S		1		_	\dashv	4	4	_	+	+	4	4	4	4		_	_	+	_	_	4	4	4	4	_	4	_	_	4	_	α	
	Manufacturing Service and User/Crypto Officer Service	Perform Network Authentication	Renewal of Network Authentication	Perform PM/CLE Voice Authentication		Set Operational Mode - Clear	Set Operational Mode - Standby	Set Operational Mode - Secure	Display Event Log		Reset Event Log	Set I me/Date	Set Key Change Method	Set Begin Time	Set End Time	Set Days Interval	Set End-to-End Delay	Set Clear Modes Allow/Disallow	Set Key Management Mode	(eys	Set Manual Authenication Key	Set Algorithm Adaptation	Set Line interface Parameters	Set Dial-Up Config	Set CLE IP Address	Set Gateway IP Address	Set Subnet Mask	Set 8 Trap IP Addresses	Display System Into	Several DIE/NET Loopbacks	Set Derault Configuration Tringer Firmware Indate	
	anu ser/	orm	ewa	era Era		ē S		e O D	200	2			Š.	Beg	E E	Days	ė	Clea	é	Zeroize Keys	Nan Nan	B.		- la		Jare	ug !	2 2	ay c) ear	Jera Jer F	
	Š,	Perf	Pent	Pert		Set		Set (lich] K	<u>.</u>	je j	žet E	jet Į	Set	get	jet.	Cero	je j	į į		Jel l) jet	Set 2	dsi	ובר הברי	Jet L	2